

# STS-132 Topping Spreader

Distribute a wide variety of shake-on toppings with the STS-132 Topping Spreader. The unique & versatile design of the STS-132 and Quick Adjust spreader head, allows you to distribute shake-on toppings from fine materials (metallic, silica, quartz and colors) to large aggregates (emery and trap rock).



## STS-132 features

- 6.5m (22') Telescopic Boom
- 1.8m (6') adjustable spreader head
- All-wheel drive, all-wheel steer
- Ability to pour any width, shape or size
- Place 11.9m<sup>2</sup> (120 s.f.) in 8 seconds
- Quick adjust head automatically reloads with every pass from the bulk storage hopper
- Quick adjust head automatically changes the distribution rate of material to match the boom speed to assure uniform coverage.

# STS-132 Topping Spreader Specifications

## General

<b>Width</b>	2.24m (7'4") outside of tires
<b>Length</b>	5.6m (18'3 1/2") driving with boom retracted 11.39m (37'4") with boom extended
<b>Height</b>	2.44m (8') at top of operator's seat
<b>Ground Clearance</b>	25.4cm (10") under raised stabilizers
<b>Wheel Base</b>	1.68m (5'6") with track of 1.83m (6')
<b>Weight</b>	6356kg (14,000 lbs) empty hopper, 7990 kg (17,600lbs) full hopper
<b>Engine</b>	48.5 kw (65 hp) @ 2600 rpm

## Spreader

<b>Type &amp; Width</b>	1.83m (72") wide hydraulic powered distribution head with auto fill
<b>Head Hopper Capacity</b>	318 kg (700lb) 0.13 m3 (4.6 cu. ft) rated volume
<b>Bulk Bin</b>	1135 kg (2500 lb) rated capacity 0.44m3 (15.5 cu. ft) rated volume
<b>Max Spread Area per Pass</b>	11.9 m2 (128 sq. ft)
<b>Spreading Rate</b>	>11.1m2 (120 sq. ft) per pass (8 seconds)



Executive Office: 16831 Link Court, Fort Myers, FL 33912 • phone: +1 239 210-6500 • fax: +1 239 210-6600  
 Operations & Support: 46980 State Highway M26, Houghton, MI 49931 • phone: +1 906 482-7252 • fax: +1 906 483-2774  
 Visit our website at [www.somero.com](http://www.somero.com)