

S-15R LASER SCREED®
Scheduled Lubrication & Maintenance

SERVICE ITEM Perform at every indicated month or operating hour interval, whichever comes first.	SERVICE INTERVAL IN MACHINE HOURS	PAGE REFERENCE IN MANUAL	LUBRI- CANT
Check engine oil level	Each Use	C.20.5	EO
Change engine oil/filter (once after 50 hrs.)	Every 3 months or 200 hrs.	C.20.5	EO
Clean oil cooler core exterior	Every 10 hrs.		
Check fuel level	Each use		
Check fuel hoses & connections	Every 100 hrs.		
Replace fuel filter	Every 400 hrs.	C.20.4	
Replace fuel hoses & clamps	Every 2000 hrs.		
Check fan belt tightness	Every 500 hrs.	C.20.6	
Inspect fan belt	Every 100 hrs.	C.20.6	
Replace fan belt	Every 500 hrs.	C.20.6	
Check hydraulic oil level	Each use	C.20.3	HYDO
Change hyd. oil filter (return line)	Check Visual Indicator	C.20.3	HYDO
Inspect hydraulic hoses for wear	Every 500 hrs.		
Change hydraulic oil in reservoir	Every 2000 hrs.	C.20.3	HYDO
Check air filter element	Every 100 hrs.	C.20.7	
Replace primary air filter element	Every year	C.20.7	
Replace secondary air filter element	Every year	C.20.7	
Check coolant level	Each use	Engine Manual	
Inspect fan	Each use	Engine Manual	
Check cooling system	Every 500 hrs.	Engine Manual	
Flush cooling system	Every 2000 hrs.	Engine Manual	
Inspect main electrical cables	Every 100 hrs.		
Replace 4-bar linkage bolts (Grade 8 w/yellow corrosion plating)	Every 250 hours	60.60	
Check Auger*	Each Use		
* Flip the auger end-for-end when the right side wears 1/8" beyond that of the left side.			
* Replace the auger when the height is less than 1-1/8". (Normal height of the auger is 1-7/8")			

Definitions: EO - Engine Crankcase Oil HYDO - Hydraulic Oil MPG - Multipurpose type grease OGL - Open Gear Lubricant
--

